 


F89 EPSC Scale of extended card

F		EPSC				Scale of extended card						S1·	S2·	S3·	D·
89		P													
	Bit element				Word element										
	X	Y	M	S	K	H	KnX	KnY	KnM	KnS	T	C	D	V	Z
S1·					*	*									
S2·					*	*	*	*	*	*	*	*	*	*	*
S3·					*	*	*	*	*	*	*	*	*	*	*
D·							*	*	*	*	*	*	*	*	*

Instruction format:



S1·: Channel No.(0~5)

S2·: Set minimum value of the scale

S3·: Set maximum value of the scale

D·: Store current scale value

※ 1: TP03SR machine type does not support the instruction.

※ 2: The instruction EPSC is used to read scale values of the extended card (TP03-2AI, TP03-2TI), and the scale values are stored in D.

For example:

